
RIB INSERT SLOT TEMPLATE


1. Follow the Instructions on the Template and remove it from the Assembly Instructions.

Align the cut-out 'SLOT' with the CENTERLINE of the Applied Rib Pocket or SEAM at a total of TEN locations the BOTTOM surface of each Wing.

WING TEMPLATES

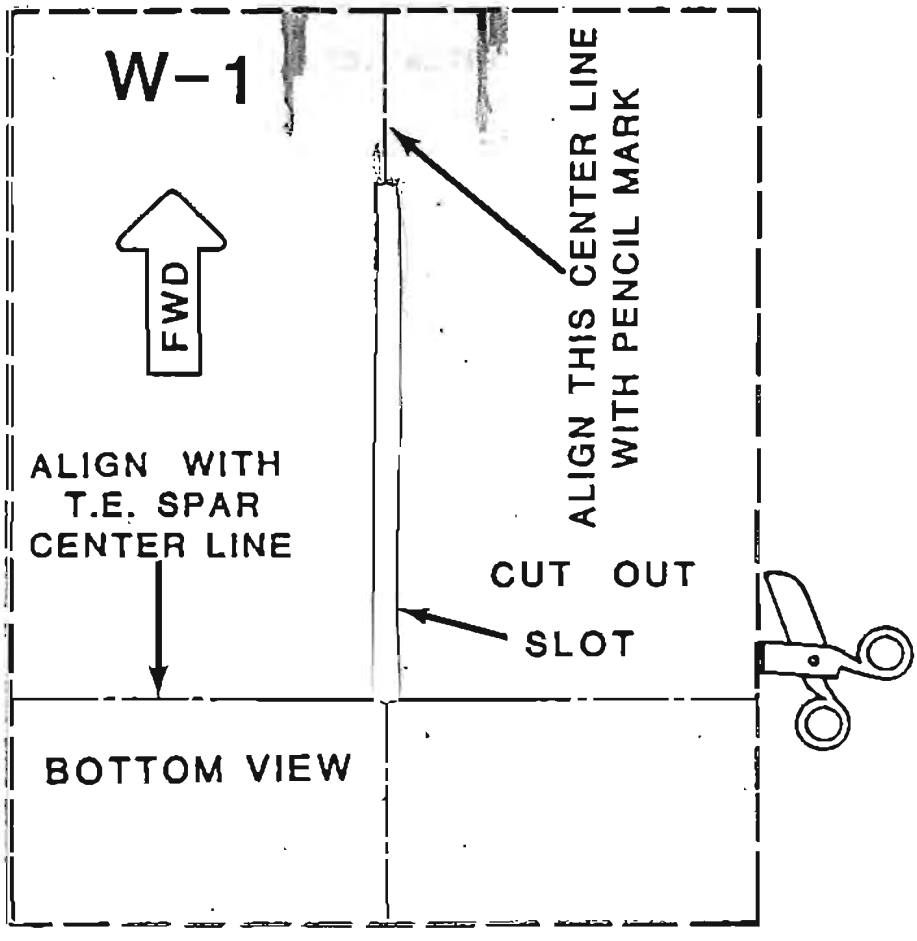

AILERON PUSHROD CUT-OUT TEMPLATE

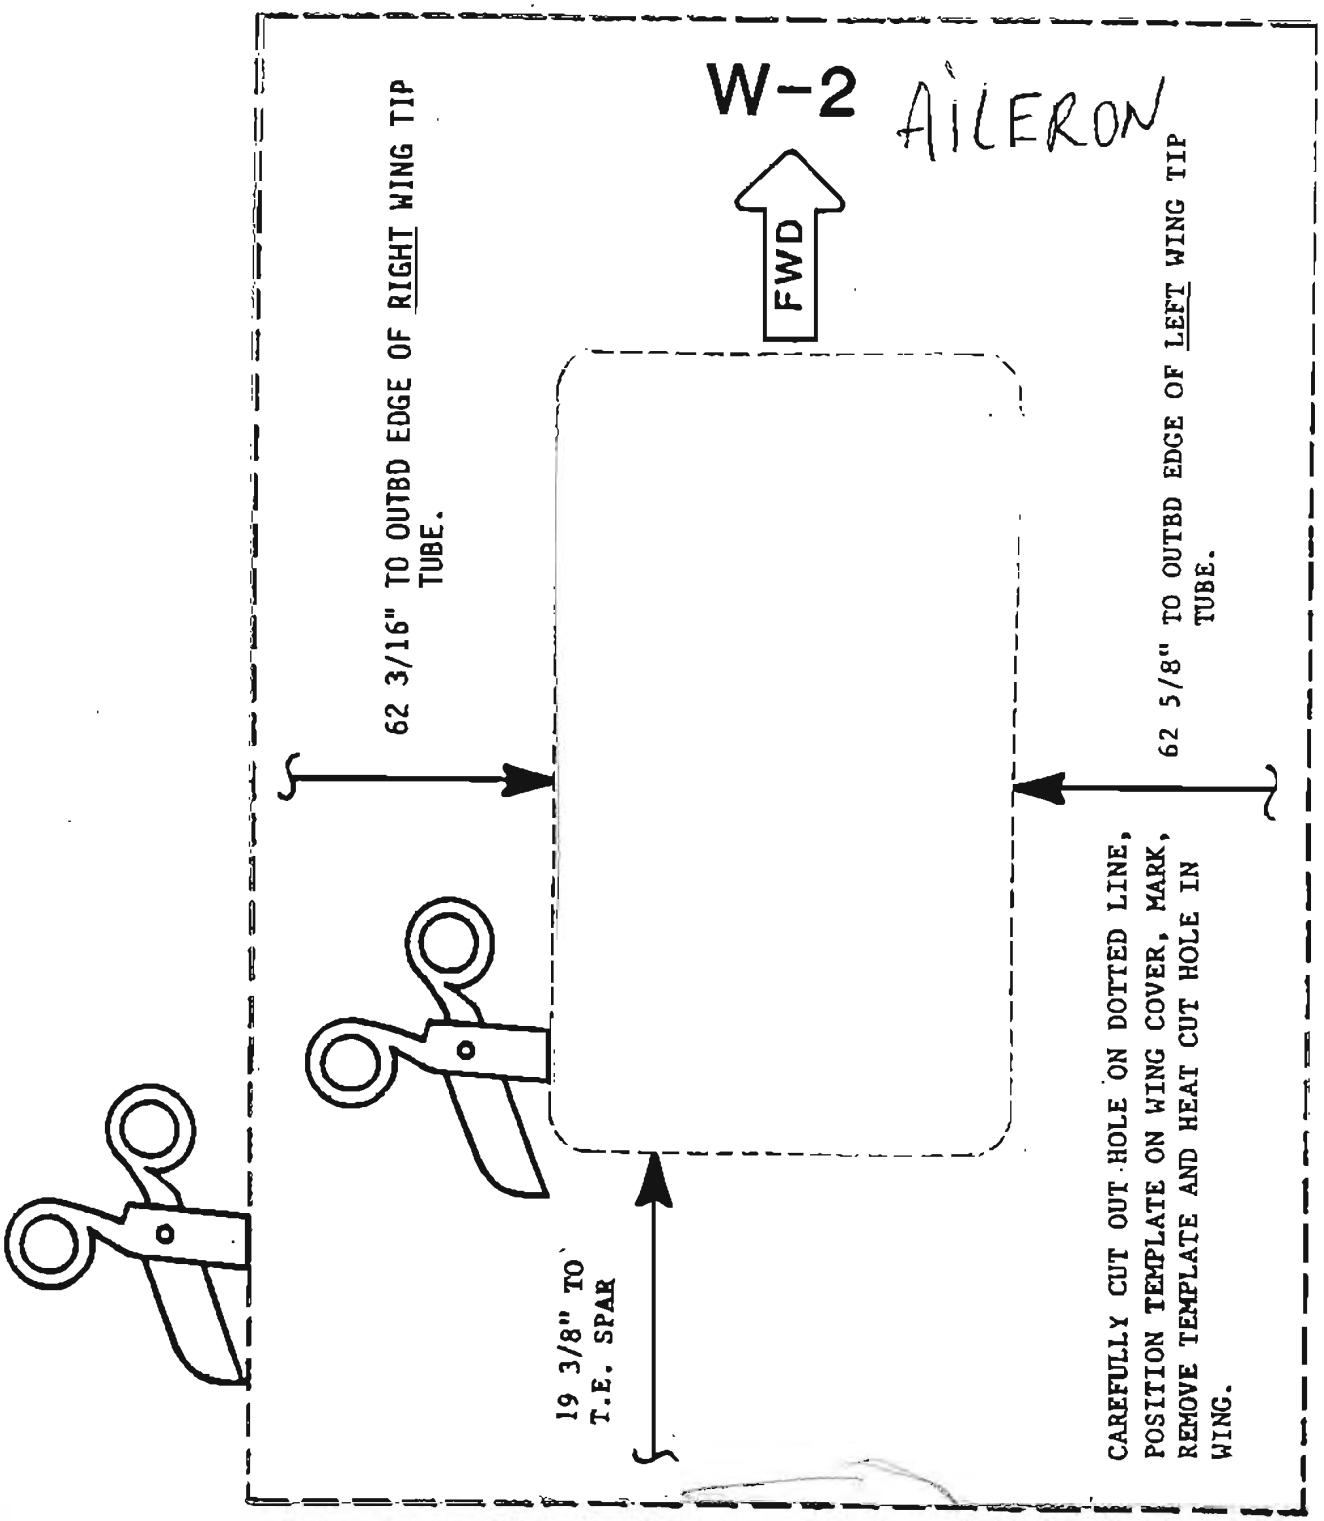


STRUT FITTING - L. E.

TEMPLATE- WING LEADING EDGE SPAR


STRUT FITTING LE

W-3

THIS SIDE OF TEMPLATE FOR BOTTOM SURFACE OF LEFT WING- TURN TEMPLATE OVER FOR RIGHT WING

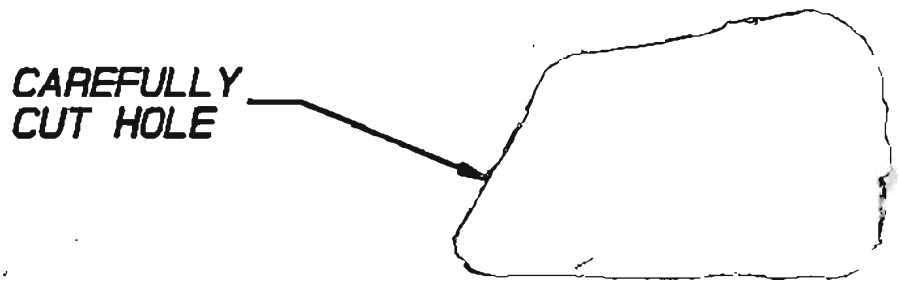

INBOARD





ALIGN WITH L.E. SPAR CENTERLINE

ALIGN WITH OUTBOARD COMPRESSION STRUT ATTACH HOLE

STRUT FITTING - T. E.

TEMPLATE- WING TRAILING EDGE SPAR
STRUT FITTING T. E

W-4

THIS SIDE OF TEMPLATE FOR BOTTOM SURFACE OF LEFT WING- TURN TEMPLATE OVER FOR RIGHT WING

